

Liquid Odor Barrier Insert First Time Installation



1
Take a new Drain Insert and place it in the waste trap.



2
Press down on the drain insert until you feel and hear a slight popping sound. The insert must be tight.



3
Pour about **30 oz. of water** over the Drain Insert. Then slowly pour the **entire contents of the Odor Barrier** onto the Drain Insert. Wipe clean. The ZeroFlush Urinal is now ready for use.


ZeroFlush™ Urinal Daily Cleaning Instructions



1
Remove debris.



2
Spray and wipe down with Pürleve™ Cleaner

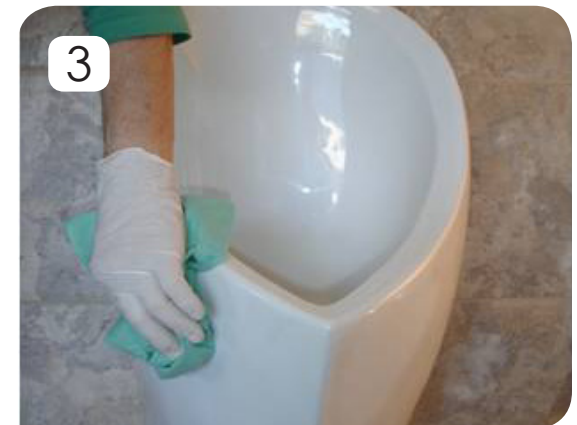

3
Wipe clean.



ZeroFlush™ Headquarters
111 W. Olive Street
Glendale, WI 53212

Phone: (407) 935-1180
Toll Free: (877) 787-5383
Fax: (407) 935-0001

Pürleve™ | ZeroFlush™
www.purleve.com
www.zeroflush.com