



Parts Included:

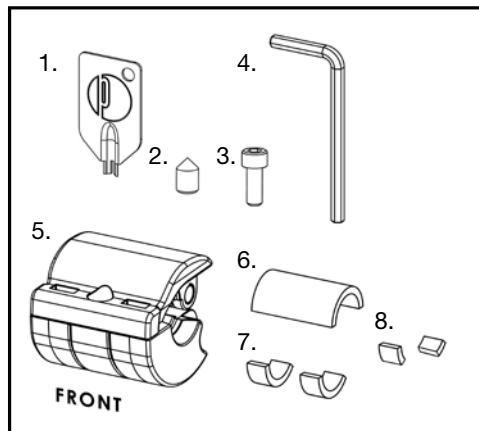


1. Pürleve Key
2. Set Screw
3. Lock Screw
4. Allen Wrench
5. EnviroSeal FLEX Handle Lock
6. Extra Center-Mount Gasket (top)
7. 2 Extra Lock Arm Gaskets (1 Side Double Stick Tape)
8. 2 Extra Center Mount Gaskets (bottom) - Double Stick Tape BOTH Sides

Left or Right Handle Installation

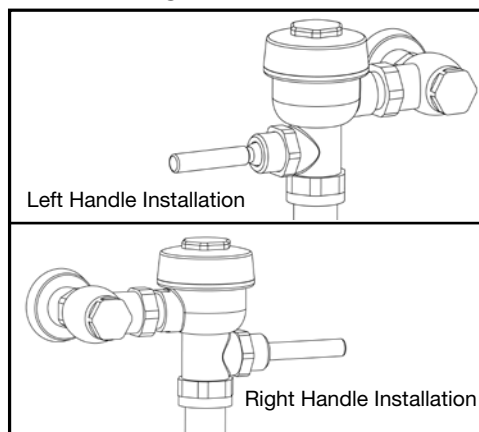


The EnviroSeal FLEX Handle Lock can be installed on BOTH a LEFT or RIGHT handle configuration using the same instructions.

EnviroSeal FLEX Handle Lock Installation Process

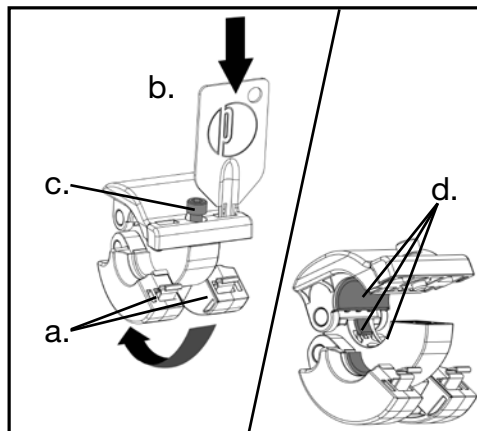


Step 1: OPEN the LEFT and RIGHT lock arms (a) on the FLEX Handle Lock with Pürleve Key (b). NOTE: Standard KEY can be used if it fits.

Step 2: Loosen Lock Screw (c) to remove the GASKET PAPER (d) from the already installed Center - Mount gaskets (Top & Bottom). This will expose the double stick tape **Step 3:** Tighten Lock Screw(c) slightly so that the lock can be placed on the Flush handle.

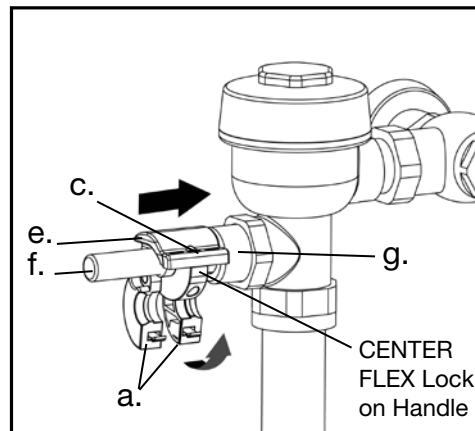

Step 4: Place FLEX Handle Lock (e) on Flush Handle (f) as CLOSE to base of Flush Handle (g) as allowed.

Step 5: Tighten Lock Screw (c) until the FLEX Handle Lock is TIGHT on Flush Handle or until the FLEX Handle Lock piece (H1) touches the main FLEX Handle Housing (H2) - DO NOT OVER TIGHTEN OR DAMAGE to LOCK CAN OCCUR.

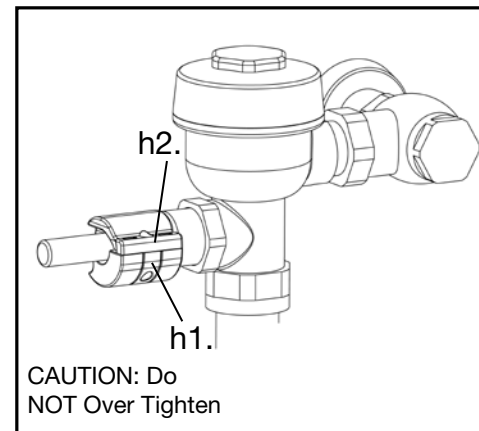


CAUTION: Do NOT Over Tighten


NOTE: Ensure the FLEX lock is oriented as shown (Centered Horizontally).

Step 6: Close both Lock Arms (a) by pushing up to 'SNAP' into place.

Step 7: If the FLEX Handle Lock is too LOOSE, easily rotated, or does not seem to work with the handle, go to Step 8. If relatively tight, go to step 10.

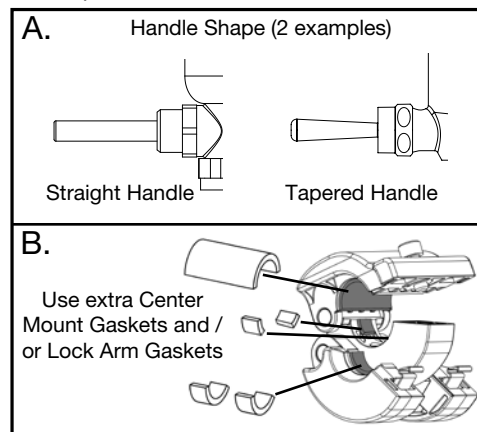


Step 8: Various handle shapes can be used with FLEX Handle Lock (A). To ensure a snug fit (not too tight) use only the gaskets required (B) to avoid lock damage. **Step 9:** Place the needed gasket(s) on the already installed Lock Arm and / or Center Mount Gaskets (Top and Bottom). Repeat Step 6.

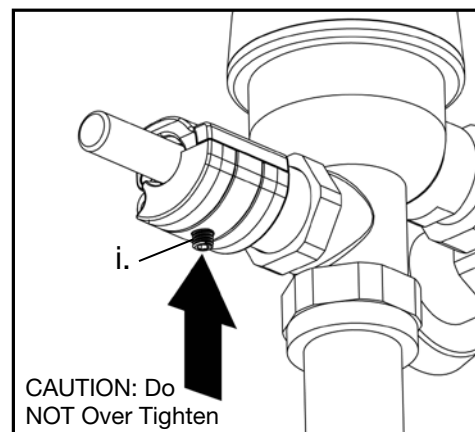


CAUTION: Do NOT Over Tighten

Step 10: Slowly tighten FLEX Lock with SET SCREW (i). Once pressure is felt as it pushes against metal urinal flush handle, **IMMEDIATELY** stop turning set screw or FLEX Lock can be damaged.

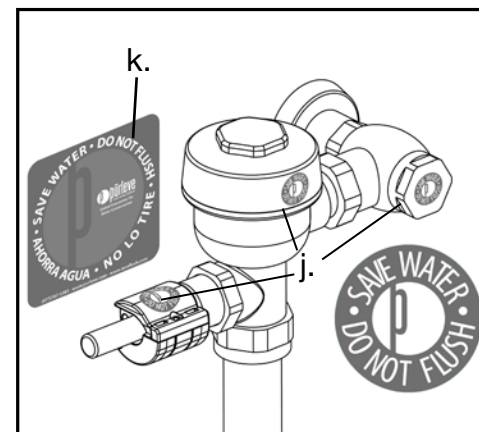


Step 11: Place the Pürleve 'Save Water - Do Not Flush' sticker (j) on the FLEX lock (as shown) or other location. If needed, place the included large Sticker (k) as well on the wall. This is to help prevent the user from trying to flush the urinal.


Left Handle Flush

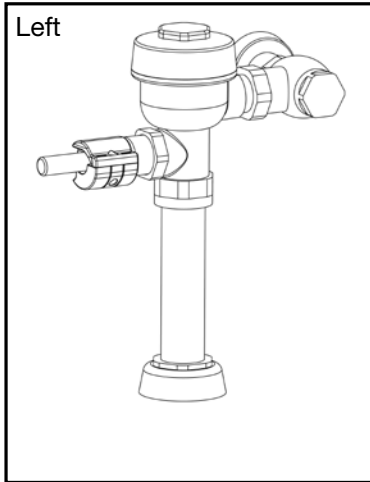


Flushing the FLEX Handle Lock is the same process for either a Left or Right urinal handle installation.

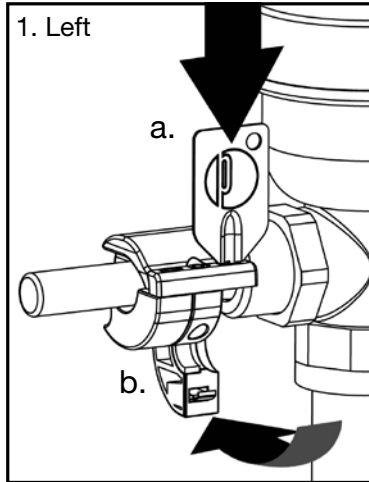


STEP 1: Insert the Pürleve key (a) (or any key that fits) into the rectangular opening closest to the Urinal Plumbing. Press the key down into the slot to disengage the Lock Arm (b). If the LOCK ARM did not FULLY release to the DOWN position, pull the LOCK ARM down manually.

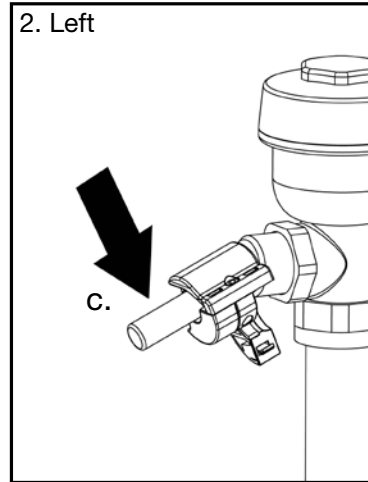

STEP 2: Once the LOCK ARM is in the DOWN position, FLUSH (c) the Urinal by pressing down on the urinal handle.

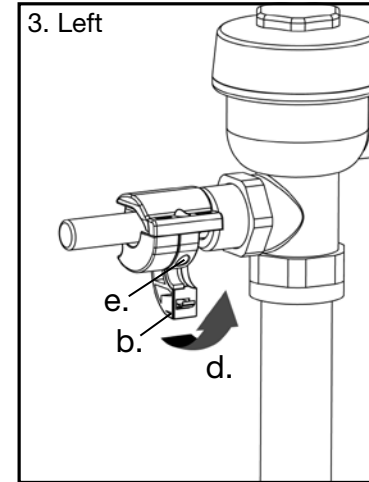

STEP 3: After flushing, reset the Lock Arm (b) by PUSHING up (d) with a CLICK to signify the lock is engaged. If the FLEX lock rotated on the Handle or moved away from the Flush valve, loosen the set screw (e), optimize position, then re-tighten the set screw (e).

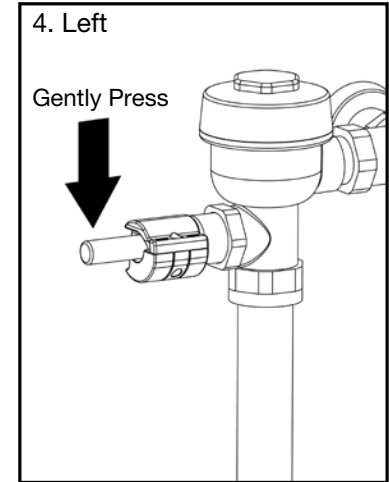

STEP 4: Gently press down on the flush handle to ensure the FLEX Handle Lock is engaged properly to help avoid flushing.

Right Handle Flush

