


# INSTALLATION INSTRUCTIONS

NOT recommended to install on copper drains.

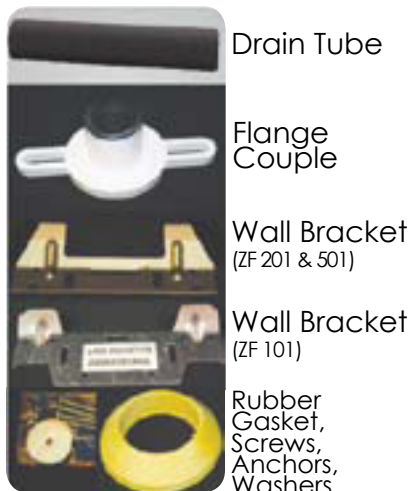

Drain Tube  
Flange Coupler  
Wall Bracket (ZF 201 & 501)  
Wall Bracket (ZF 101)  
Rubber Gasket, Screws, Anchors, Washers



1 Place Template Over Drain - 101 template shown



2 Place rubber gasket



3 Lubricate coupler male side



4 Insert drain tube through coupler front side. Install coupler on flange



One of Three Options



5 Lubricate Housing drain



6 With urinal on wall. Test Fit proper alignment



7 PULL drain forward with channel lock pliers into housing drain until it meets internal stop

**NEW CONSTRUCTION**  
Drain Must Have Standard Urinal Flange  
NOT SUPPLIED.

**BEFORE REPLACEMENT URINAL INSTALLATION PLEASE:**

- Shut off and cap water supply.
- Remove existing hardware, caulk and grout.
- Remove all hidden traps and conventional siphons.
- SNAKE the sewer line thoroughly
- Check for PROPER VENTING
- ENSURE PROPER DRAIN PITCH to ensure water flows from the Urinal.



8 Drain pipe should go in until it meets the stop inside the trap housing



9 Remove Insert and run water through system. Check for leaks



10 Using the 2 rubber washers and two 1.5in (38.1mm) screws, continue to anchor the bottom of urinal to the wall.